




PowerPoint

INSTRUCTION MANUAL

MODEL NO.:P445ICSKW

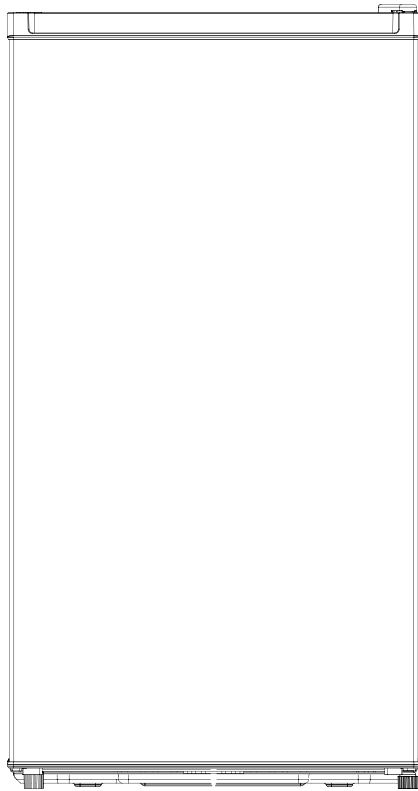

To ensure proper use of this appliance and your safety, please read the following instructions completely before operating this appliance.

WARNING!

·This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses and by clients in hotels, motels and other residential type environments.

- bed and breakfast type environments.

- catering and similar non-retail applications.

·The instructions state that:

- the appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

- children being supervised not to play with the appliance.

Do not damage the refrigerant circuit.

WARNING-Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING-Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING-Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Do not store explosive substances such as aerosol cans with flammable propellant in this appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.

For compression-type appliances which use flammable refrigerants, instructions shall include information pertaining to the installation, handling, servicing

This refrigerating appliance is not suitable for freezing foodstuffs

Appliances which use flammable insulation blowing gases, instructions shall include information regarding disposal of the appliance

Introduction

Thank you for choosing this appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference. Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.


This quality appliance has been tested and certified to meet all applicable Europe electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations by a qualified electrician.

After unpacking the appliance ensure that there is no visible damage.

If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

Description of the Appliance

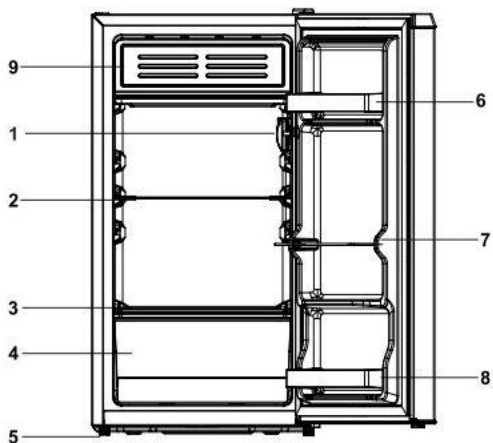

- 1 Thermostat Control (Interior Light)
- 2 Interior Glass Shelf
- 3 Salad Crisper Cover
- 4 Salad Crisper Box
- 5 Levelling Feet
- 6 Door Storage(above)
- 7 Door Storage(middle)
- 8 Door Storage(under)
- 9 Convenience Feature

(Picture shown for indicative purposes only, model supplied may differ).

CONTENTS:

Section 1. Installation

Section 2. Safety Advice

Section 3. Operating the Appliance

Section 4. Maintenance

Section 1. Installation

Appliance must be left to stand in an upright position for at least 4 hours before being s

- This appliance has been designed for Domestic Use Only.
- Remove all packaging and securing tape from the appliance
- Wash the interior of the appliance with Lukewarm water containing a small amount of bicarbonate soda (5ml to 0.5 litres of water)
- Position the appliance in a dry atmosphere and out of direct sunlight.
- Do not position next to a cooker or other sources of heat, i.e. Radiator.

- This appliance should not be sited in a cold atmosphere, i.e. garage or shed. Doing so may cause the freezer unit to unfreeze.

If positioned next to another fridge or freezer, leave a minimum gap of 2cm between the appliances to avoid condensation

A clearance of 50mm should be left above the appliance. If this cannot be achieved you should ensure a clearance of 25mm is maintained on each side of the appliance.

Fit the plastic wall spacers to the condenser on the rear of the appliance, this will ensure an air gap between the appliance and the wall.

Do not place or store heavy items on the top of this appliance.

- Ensure that the appliance is positioned on a firm flat floor

This refrigerating appliance is not intended to be used as a built-in appliance.

- This appliance must be level. Adjust the level by screwing the adjustable feet up or down (use your fingers or a suitable spanner).

Ensure that the appliance is upright and both feet are in firm contact with the floor so that the cabinet is stable

Connect the plug to an adjacent 13amp socket outlet and ensure that the appliance is not standing on the supply cable.

Section 2. Safety Advice

Please read this booklet thoroughly before installing and switching on the appliance. The manufacturer accepts no responsibility for incorrect installation and usage.

If this appliance is to replace an old refrigerator with a lock, as a safety measure break or **remove the lock and/or door** before disposal.

Your old appliances contain insulation gases and refrigerant that must be disposed of correctly. Please ensure that the refrigerant circuit is not damaged before the appliance is taken away for correct disposal in line with current

legislation. If there is any doubt, contact your Local Authority for instructions.

This appliance may contain refrigerant isobutene(R600a/R134a). This is a natural gas with a high level of environmental compatibility; however, caution is required as isobutene is a flammable gas. It is essential to ensure that refrigerant tubes are not

damaged during transportation and the installation of the appliance. In the event

that the refrigerant circuit is damaged, avoid naked flames or sources of ignition and ventilate the room in which the appliance is situated.

If using an adaptor, this must be used in accordance with the manufacturers instructions and ensure that the electrical circuit is not overloaded as this could cause overheating.

Do not twist or bend the cables and keep them away from hot surfaces.
Do not plug in or unplug this appliance with wet hands.

Following installation make sure that the power cable is not trapped underneath the appliance.

Ensure the appliance is left in an upright position for at least 4 hours before you switch it on

The appliance must be unplugged after use and before carrying out user maintenance on the appliance.

Climate Range

The information about the climate range of the appliance is provided on the rating plate. It indicates at which ambient temperature (that is, room

Climate range	Permissible ambient temperature
SN	from +10°C to +32°C
N	from +16°C to +32°C
ST	from +16°C to +38°C
T	from +16°C to +43°C

temperature, in which the appliance is working) the operation of the appliance is optimal (proper).

Note Given the limit values of the ambient temperature range for the climate classes for which the refrigerating appliance is designed and the fact that the internal temperatures could be affected by such factors as location of the refrigerating appliance, ambient temperature and the frequency of door opening, the setting of any temperature control device might have to be varied to allow for these factors, if appropriate.



Note: When operating in an environment other than the specified climate type (i.e., beyond the rated ambient temperature range), the appliance may not be able to maintain the desirable compartment temperatures.

Section 3. Operating the Appliance

3.1. Switching on the Appliance

- Allow the appliance to stand upright for a minimum of 4 hours before you switch it on.
- Plugin the appliance and switch on at the mains supply.
- Set the thermostat control to the required setting as detailed in the Temperature Control section (3.2.).
- Leave the appliance for approximately 4 hours for the correct temperature to be reached.

3.2. Temperature Control


The temperature selector knob is located on the lamp unit inside the refrigerator (see Description of the Appliance on page 2).

Setting "0": Unit Off

Setting "MIN": Unit On-Warmest Temperature

Setting "NORMAL": Normal Operation (adequate for most situations)

- Setting "MAX": Coldest Temperature

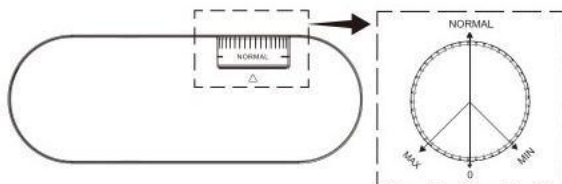

Important!

During high ambient temperatures e.g. On hot summer days, it may be necessary to set the thermostat to the coldest setting. This may cause the compressor to run continuously to maintain low temperature in the cabinet.

3.3. Normal Operating Sounds

You may hear faint gurgling or bubbling sounds when the refrigerant is pumped to the cooling system and through the coils or tubing at the rear of the appliance. When the

compressor is in operation you may hear a slight whirring sound or pulsating noise. The thermostat controls the operation of the compressor, and you may hear a slight click as it cycles in and out.

Use of the fresh food compartment

Set the temperature of the fresh food storage compartment as recommended and store the foods that are intended for short-term storage, or to be eaten at any time in the fresh food compartment.

Fridge shelf: When removing the shelf, lift it up first, and then pull it out; and when installing the shelf, place it into position before putting it down. (For the two-section shelf, push the first section to the rear end, and then pull the second section out). Keep the shelf rear flange upward, to prevent foods from contacting the liner wall. When taking it out or putting it on the shelf, hold it firmly, and handle it with care to avoid damage.

Crisper box: Pull out the crisper box for access to food. After using or cleaning the cover plate of the crisper box, be sure to put it back onto the crisper, so that the internal temperature of the crisper box will not be affected.

Cautions for food storage

Clean the food and wipe them dry before storing them inside the refrigerator. Before foods are put in the refrigerator, it is advisable to seal them up, to prevent water evaporation to keep fresh fruits and vegetables and prevent odor.

Do not put too much weighted food inside the refrigerator. Keep enough space between foods; if too close, the cold air flow will be blocked, thus affecting the refrigeration effect. Do not store excessive or overweight foods, to avoid the shelf from being crushed. When storing the foods, keep a distance away from the inner wall; and do not place the water-rich foods too close to the fridge rear wall, they may get frozen on the inner wall.

Categorized storage of foods should be stored by category, with the foods you eat every day placed in front of the shelf, so that the door open duration can be shortened and food spoilage due to expiration can be avoided.

Energy-saving tips: Allow the hot food to cool down to room temperature before putting it in the refrigerator. Put the frozen food in the fresh food compartment to thaw, using the low temperature of the frozen food to cool the fresh food, thus saving energy.

3.4. Energy Saving Advice

Do not install the appliance close to sources of heat, such as a cooker, dishwasher or radiator

- Locate the appliance in a cool well-ventilated room and make sure that the air vents are clear

Try to avoid keeping the doors open for a long time, warm air will enter the cabinet and may cause a buildup of ice as well as affecting the energy

consumption. Ensure there are no obstructions preventing the doors from closing properly

Ensure that the door seals are clean and there are no tears or splits.

- Keep the most perishable foods, (those with a short shelf-life, such as cooked meats), in the coldest part of the fridge. The Salad Crisper Box is the warmest part of your fridge and should be used for vegetables, salads and fruits etc. (see Description of Appliance on Page 2)

Do not overload the fridge: the cooling air that circulates to keep the fridge cold gets blocked and pockets of warm air form.

- Do not put hot food into the fridge or freezer let it cool down first.

3.5. In the Event of a Power Failure

If there is a power failure, keep the doors closed. When the power has been restored the appliance will start to operate but it may take some time to achieve the pre-set operating temperature. Check the condition of your stored food items and liquids.

Section 4. Maintenance

Before any maintenance or cleaning work is carried out, DISCONNECT the appliance from the ELECTRICITY supply.

4.1. Internal Cleaning

Clean the interior and accessories with warm water and bicarbonate of soda (5ml to 0.5 litre of water). Rinse and dry thoroughly. Do not use detergents, abrasive powders,

highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol.

4.2. External Cleaning

Wash the outer cabinet with warm soapy water. Do NOT use abrasive products. There may be sharp edges on the underside of the product, so care should be taken when

cleaning. Once or twice a year dust the rear of the appliance and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause increased energy consumption.

4.3. Defrosting

The fridge compartment will automatically defrost itself. However, you will need to

defrost the freezer periodically. When ice buildup in the freezer exceeds 3-5mm, empty the contents and switch off the appliance, leave the door open and allow the ice to melt. Place the frozen food items in a cool-bag or wrap them in thick newspaper. **Do not**

use sharp objects to scrape the ice away. Clean and dry the interior, close the door and turn on the power to the appliance. When the power has been restored the

appliance will start to operate but it may take some time to achieve the pre-set operating temperature.

4.4. When the appliance is not in use

When the appliance is not in use for long periods, remove the contents, disconnect from the electricity supply and clean the appliance, leaving the door ajar until you wish to use the appliance again.

4.5. What to do if something goes wrong

There is no power to the appliance:

- Check there is not a power cut
- Check there is power to the electric socket/appliance
- Check the fuse in the plug (Must be 13 amp)
- Check that the thermostat has been set to position MIN or above (see section 3.2.)

The compressor runs continuously:

- Are the doors closed correctly?
- Have large quantities of food recently been added to the appliance? -if yes, allow the interior temperature to recover
- Have the appliance doors been opened frequently? -if yes, allow the interior temperature to recover
- Check that the Thermostat Control has not been set to maximum

There is excessive frost/ice buildup:

- Ensure that the doors have been closed correctly
- Ensure that the door seals are clean and sealing correctly
- Check that the Thermostat Control has not been set to maximum

The appliance is making a noise:

- Refer to Normal Operating Sounds, section 3.4
- Ensure that the appliance has been installed correctly (see section 1).

If after the above checks, there is still a fault please contact your retailer.

Important Note:

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by

inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed-Out Wheelie Bin, indicates that this appliance may not be treated as

household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information

about treatment, recovery and recycling of this product, please

contact your local authority, your household waste disposal service or the retailer where you purchased the product.



We continuously try to improve our products for the benefit of our customers.
For this reason, we reserve the right to make changes to any product at any time
without Notice

POWERPOINT STANDARD MANUFACTURER WARRANTY

TERMS AND CONDITIONS

This appliance was supplied by Shomar Ltd, Dublin. Combining years of knowledge and experience with our commitment to producing high quality appliances is what make us the country's best, fully Irish owned, Domestic Appliance Distributor. We provide all after-sales services from our Headquarters in Dublin.

12 Month Warranty

This Warranty is for 12 Months from Date of Purchase and covers both Parts & Labour. Any complaints that occur during normal use of these appliances will be repaired free of charge provided the appliance has been used and maintained in accordance with the Terms and Conditions.

If a repair to your appliance is necessary, evidence of purchase will be required for a call to be covered by your Warranty.

Two-year Warranty

To avail yourself of the second-year free warranty, you must register your new appliance with Shomar Ltd. Registering your appliance will also allow us to contact you in the unlikely event that a modification is required. In case of an insurance loss such as theft, fire or flood, your registration will serve as proof of purchase. Scan our QR to register your warranty -



www.powerpointappliances.ie

Terms and Conditions

The Warranty only covers the appliance for use in a normal domestic environment. Institutional use or commercial use is not covered. (To obtain a commercial Warranty on your appliance contact us on service@shomar.ie for more details)

The following is not covered by the Warranty:

- Complaints due to the use of incorrect voltage.
- Failure of the water supply
- Failure of the electricity supply
- Failure to operate the appliance in line with the guidelines set out in the instruction manual.
- Damage to the appliance or its components, however caused.
- Consumable items. E.g. Fuses, bulbs, broken glass, Knobs, Plastics.
- Blockages of Filters, drainage systems, soap dispensers etc.

Note:

- Repairs or modifications carried out by anyone other than Shomar authorised agents will deem the Warranty Null and Void. Please visit www.powerpointappliances.ie to obtain information on authorised agents.
- All Gas appliances must by law be fitted by a Registered Gas Installer. For further details see WWW.RGI.IE
- Built-In appliance installation and reversing of the door hinges must be undertaken by a competent person.
- If in any doubt about the installation of our domestic appliances please email us for more details.service@shomar.ie

How to log a service call:

If in the event you need to log a service call for your appliance you can contact our service department on Ph: 01-4505327 (during working hours)

Email service@shomar.ie

Go online www.powerpointappliance.ie

This Warranty does not in any way diminish or affect your statutory rights in connection with the product. This Warranty is in addition to your statutory rights as a consumer. If you have any questions about these rights, please contact the retailer from which you purchased the product. In certain circumstances, it is possible that your statutory rights may offer additional or higher levels of protection than those offered under the terms of this Warranty.

This Warranty applies only to the cost of repairing the product. To the extent permitted by law, the Manufacturer does not accept and will not be held liable for any financial loss incurred in connection with the failure of any product to operate in accordance with the expected standards. Such financial loss includes but is not limited to loss arising from:

Food Loss

Time taken from work

Damaged clothing or other items

Laundry costs

Meals from Restaurant /Takeaways

General Compensation for Inconvenience

Does PowerPoint offer replacements?

This is a repair-only Warranty. On occasion, the Manufacturer may at its sole discretion, replace your product with a new product instead of carrying out a repair. In the unlikely event we cannot repair your appliance it will be replaced free of charge, replacement will be authorised and provided by the retailer upon contact with the manufacturer.

Any costs related to disconnecting the faulty product and installing the replacement product will not be borne by the Manufacturer unless previously agreed to in writing. The original Warranty will continue to apply to the replacement product; the new product will not come with a new Warranty.

Will I be charged for the repairs?

It is the responsibility of the consumer to provide proof of purchase to the Engineer to ensure your product is covered by this warranty. The Manufacturer reserves the right to charge for service call if:

- You cannot provide proof of purchase that your product is covered by this Warranty.
- The engineer finds that there is no fault with your product.
- That your product has not been installed or operated in accordance with the User Manual.
- That the fault was caused by something other than faulty materials, defective components, or manufacturing defects.
- For missed appointments.

Payment is due immediately upon the Engineer providing you with an invoice. The Manufacturer reserves the right to terminate the Warranty if you fail to pay the costs for the service call.

The spare part availability of this appliance is 10 years. During this time, original spare parts will be available to operate the appliance properly.

This appliance was supplied by Shomar Ltd Dublin. If you would like to contact us in relation to your product for service or spare parts, we can be contacted on 01-4505327 or service@shomar.ie.

The model information as stored in the product database can be reached by scanning the QR Code below or by visiting <https://eprel.ec.europa.eu/> and entering the following registration number: **2077233**

